

60087 PARTS LIST

	PARTS#	PARTS NAME	QTY.
1	60087-1	Rip Guide	1
1-1	60087-2	Wing Screw for Rip Guide	2
1-2	60087-3	Square Nut for Rip Guide	2
2	60087-4	Blade Guard	1
2-1	60087-5	Screw Set for Blade Guard	1
3	60087-6	Screw for Guard Support Set	1
4	60087-7	Angle Guide Set	1
5	60087-8	Cutting Table	1
5-1	60087-9	Screw Set for Cutting Table	4
6	60087-10	Wrench	1
7	60087-11	Square Support Set for Frame (w/ 3 screws)	1
8	60087-12	Frame	1
9	60087-13	Miter Guide Plate	2
9-1	60087-14	Screw for Miter Plate	2
9-2	60087-15	Angle Screw for Miter Plate	2
10	60087-16	Power Switch	1
10-1	60087-17	Power Switch Cover	1
11	60087-18	Motor Set (w/ 4 screws)	1
12	60087-19	Capacitor Set	1
13	60087-20	Rubber Base	4
14	60087-21	Screws for Dust Cover	2
15	60087-22	Dust Cover	1
16	60087-23	Blade Lock Nut	1
17	60087-24	Outer Washer	1
18	6-7003CR	7 in. Continuous Rim Blade	1
19	60087-25	Inner Washer	1
20	60087-26	Power Cord	1
20-1	60087-27	Strain Relief Bushing	1
21	60087-28	Base Plate Set (w/ 4 screws)	1

EXPLODED VIEW

To assemble the tile guide
and place into the cutting table

