


Leave-In Hard Style "T" Tile Spacers

10202, 10203, 10204

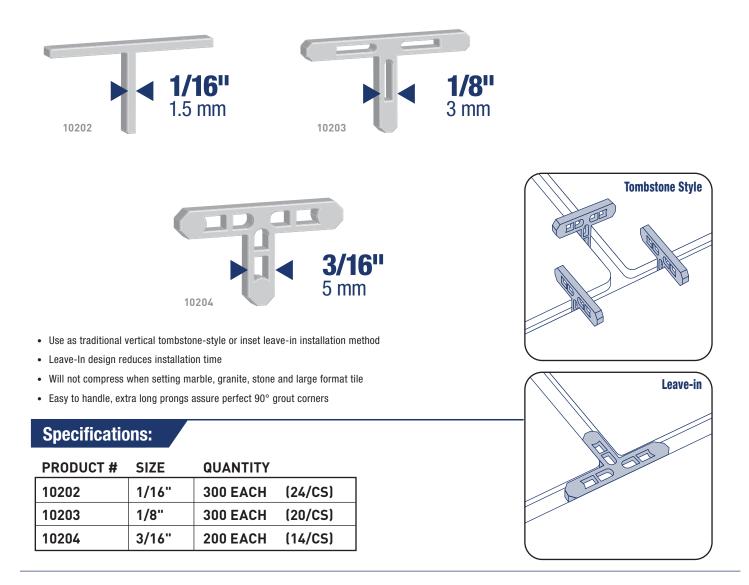

QEP[®] "T" Tile Spacers are designed for Subway, brick layout or any offset tiling patterns and perimeters. "T" Tile Spacers provide consistent space or gap between tiles when installing them on the mortar, allowing for an even finish when it's time to grout the tiles. Positioned into the corner of each tile, these spacers ensure a completely straight, even finish. Easy to use, simply place the spacers at each corner of the tiles when laying them down, then push the tiles together until the spacer is contacting each corner. Removing them shortly after installation, they can be rinsed and used again.

Professional Tools for Professional Results